


OHTAKE NJL-23 Serie

NJL-2320 NJL-2323 NJL-2326 NJL-2330

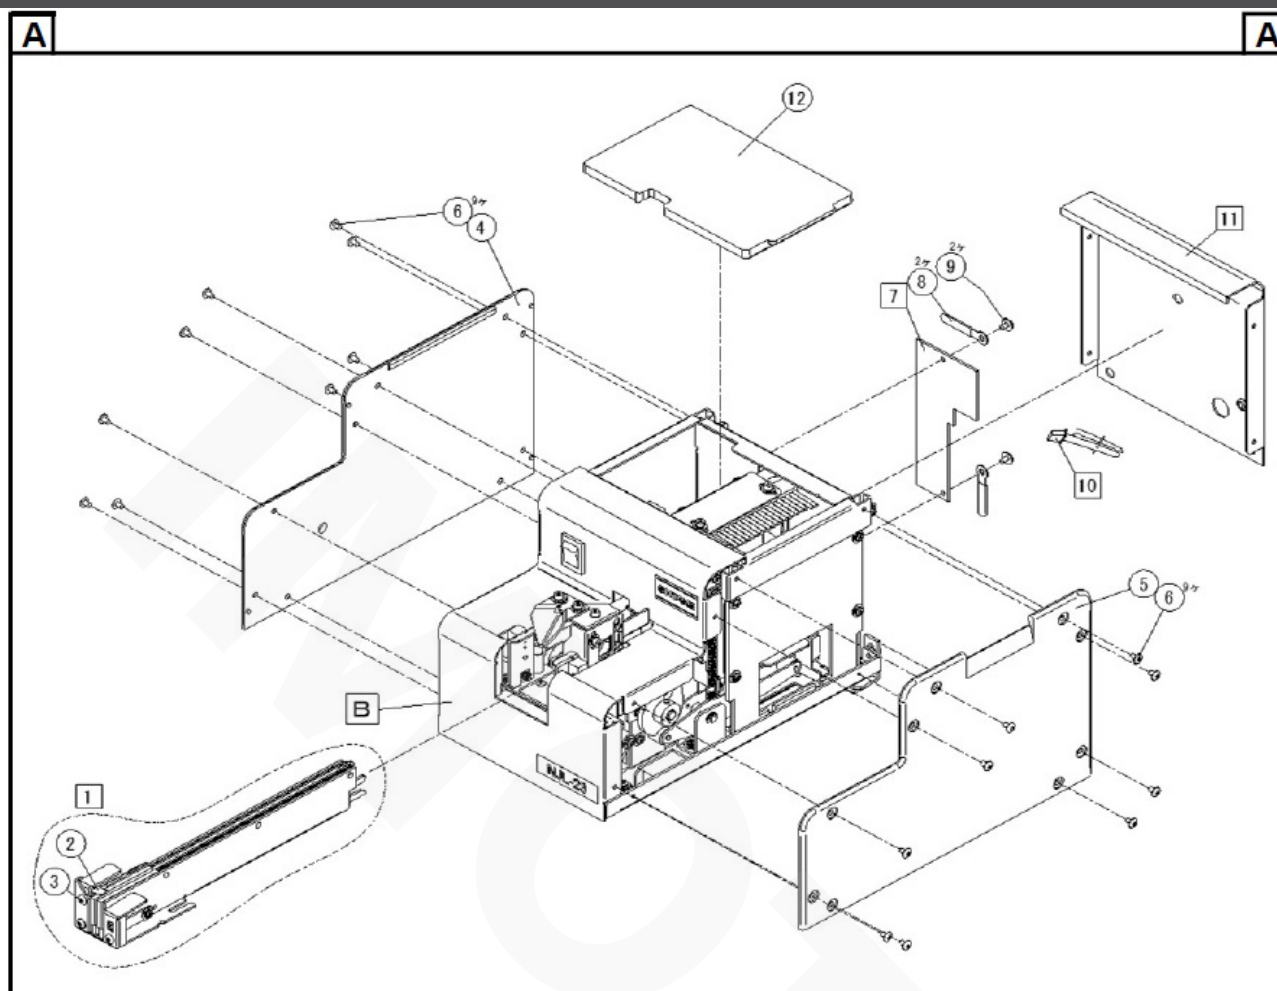

No.	Part Number	Name of Part
B	-	Main Body B:(Model Mix ver)
1	※3 RL20SET	Rail set M2.0
	※3 RL23SET	Rail set M2.3
	※3 RL26SET	Rail set M2.6
	※3 RL30SET	Rail set M3.0
	※3 RL35SET	Rail set M3.5
	※3 RL40SET	Rail set M4.0
	※3 RL50SET	Rail set M5.0
2	NJ20020	Stopper
3	ZZM00159	Plus Truss Head Screw M2.6*3 Ni (10pcs)
4	NJ08013	Left Side Cover
5	NJ08014	Right Side Cover
6	ZZM00160	Plus Truss Head Screw M2.6*4 Ni (10pcs)
7	ZPV00001#01	Main Circuit Board For NJ-NSB
8	CS-9	Coated Clip(10pcs)
9	ZZM00029	Pan Head Screw PW,SW M2.6*6 (10pcs)
10	NJ09781#09	Signal Harness
	NJ00082#01	Rear Cover Assy(Model Mix ver)
11	※2 NJ00048#01	Rear Cover Assy (23)
	※2 NJ00048#03	Rear Cover Assy (45)
12	NJ08015	Upper Cover


OHTAKE NJL-23 Serie

NJL-2320

NJL-2323

NJL-2326

NJL-2330

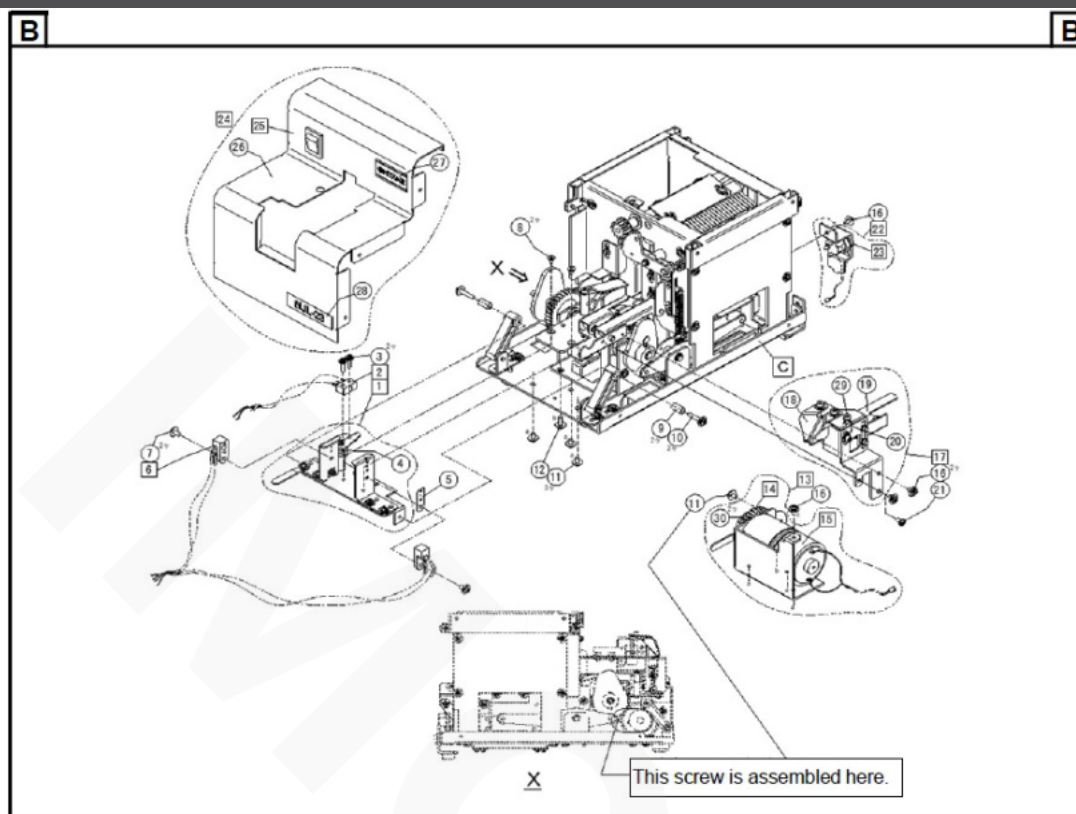

No.	Part Number	Name of Part
C	-	Main Body C
1	NJ21041	Rail Holder #2 Assy
2	NJ09582#01	Take-Out Sensor (With Harness)
3	ZZM00021	Pan Head Screw PW,SW M2*10 (10pcs)
4	NJ03047	Switch Link Spring
5	NSR08621	Light Receiver Slit Plate
6	NJ09582#02	Front Sensor (With Harness)
7	ZZM00029	Pan Head Screw PW,SW M2.6*6 (10pcs)
8	ZZM00099	Plus Countersunk Head Screw M2.6*4 (10pcs)
9	ZZM00584	Brass Spacer
10	ZZM00033	Pan Head Screw PW,SW M2.6*14 (10pcs)
11	ZZM00054	Pan Head Screw PW,SW M2.6*5 Loosening Prevention (10pcs)
12	ZZM00055	Pan Head Screw PW,SW M2.6*8 Loosening Prevention (10pcs)
13	NJ04500#01	Driving Motor Assy
14	NJ04013	Driving Gear #1
15	NJ09582#05	Main Motor (With Harness)
16	ZZM00028	Pan Head Screw PW,SW M2.6*5 (10pcs)
17	NJ05001#02	Bit Guide Assy
18	NJ05016	Bit Guide
19	NJ05015	Screw Guide #1
20	TPO00809	Compression Spring
21	ZZM00074	Pan Head Screw SW M2.6*5 (10pcs)
22	NJ00076#01	DC Jack Assy:NJ
	NJ02003	DC Jack Assy
23	NJ09589#01	POWER Plug (With Harness)
	NJ09582#04	POWER Plug (With Harness)
24	NJ21047#01	Front Cover Assy (23)(With Sticker)
	NJ21047#02	Front Cover Assy (45)(With Sticker)
25	NJ09582#03	Power Switch (With Harness)
26	NJ08011	Front Cover
27	ZDE00001	Logo Sticker
28	ZDE00012#01	Sticker:NJL-23
	ZDE00012#03	Sticker:NJL-45
29	ZZM00188	Hex. Socket Head Bolt M2.6*20 (10pcs)
30	ZZM00388	Hex. Socket Head Screw M4*8 Loosening Prevention (10pcs)


OHTAKE NJL-23 Serie

NJL-2320

NJL-2323

NJL-2326

NJL-2330

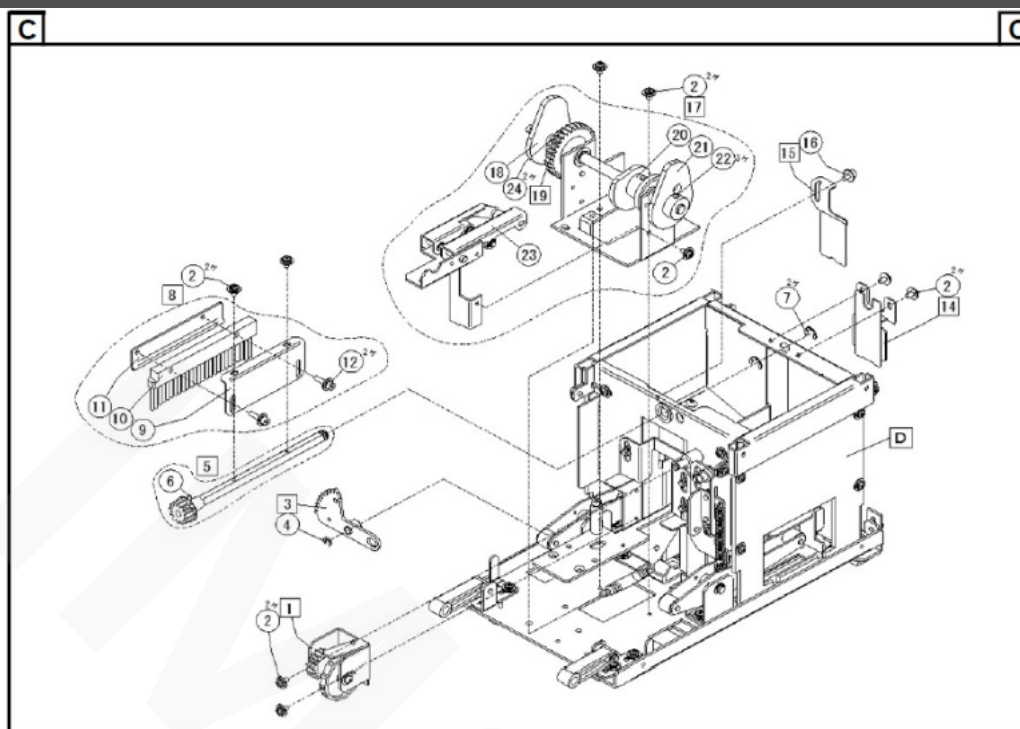

No.	Part Number	Name of Part
D	-	Main Body D
1	NJ21040#01	Vibration Cam Assy (23)
	NJ21040#02	Vibration Cam Assy (45)
2	ZZM00028	Pan Head Screw PW,SW M2.6*5 (10pcs)
3	NJ11053	Brush Driving Gear
	NJ02023	Brush Driving Gear 1
4	ZZM00510	E-Type Snap Ring E-3 (10pcs)
5	NJ02004	Brush Driving Shaft Assy
6	ZZM00557	Spring Pin 2*16 (10pcs)
7	ZZM00512	E-Type Snap Ring E-5 (10pcs)
8	NJB0040	BRUSH Assy
9	NJ02038	Brush Bracket #1
10	NJ02039#01	Brush
11	NJ11047	BRUSH BRACKET
12	ZZM01008	Hex. Socket Head Bolt PW,SW M2.6*10 (10pcs)
14	NJ20012	Closing Plate:M23
	NJ20011	Closing Plate:M45
15	NJ21046#01	Passing Plate #1 Assy M2.0:WL2320
	NJ21046#02	Passing Plate #1 Assy M2.3:WL2323
	NJ21046#03	Passing Plate #1 Assy M2.6:WL2326
	NJ21046#04	Passing Plate #1 Assy M3.0:WL2330
	NJ21046#05	Passing Plate #1 Assy M3.5:WL4540
	NJ21046#06	Passing Plate #1 Assy M4.0:WL4540
	NJ21046#07	Passing Plate #1 Assy M5.0:WL4550
16	ZZM00261	Hex. Socket Head Bolt PW,SW M2.6*5 (10pcs)
17	NJ04000#02	Driving Shaft Bracket Assy
18	NJ04014	Driving Cam - Left
19	NJ04013	Driving Gear #1
20	NJ04016	Shutter Cam
21	NJ04015	Driving Cam - Right
22	ZZM00559	Spring Pin 2.5*16 (10pcs)
23	NJ04004	Brush Link Assy
24	ZZM00388	Hex. Socket Head Screw M4*8 Loosening Prevention (10pcs)


OHTAKE NJL-23 Serie

NJL-2320

NJL-2323

NJL-2326

NJL-2330

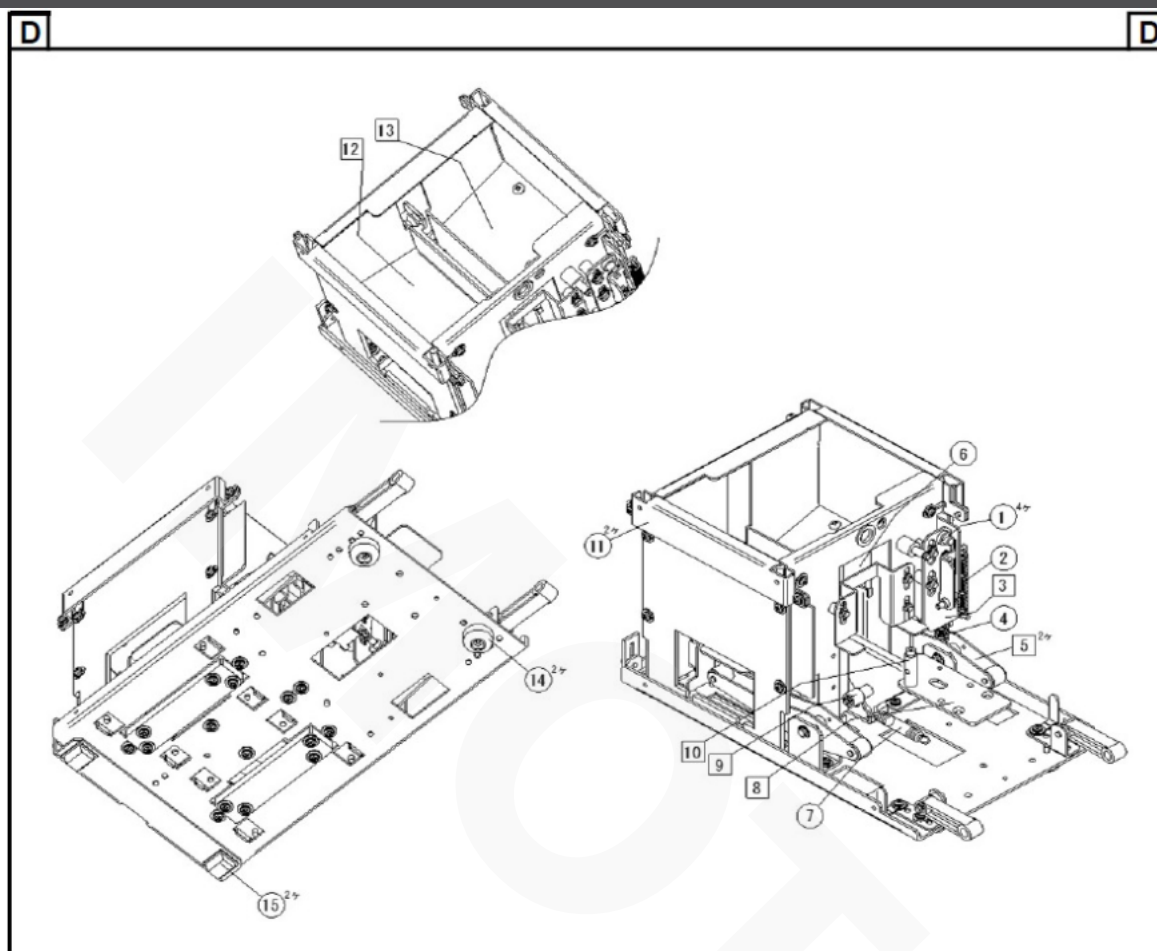

No.	Part Number	Name of Part
1	ZZM00628	Polyurethan Slider/STW-FT45/4.6X7.2Xt0.13 (10pcs)
2	NJ11044	TENSION SPRING
3	NJ11051	Slide Plate #1
	NJ02026	Slide Plate #1
4	NJ02041#01	Extension Spring
5	NJ03002	Driving Link Plate Assy
6	NJ20014	Passing Plate #2:M23L
	NJ20013	Passing Plate #2:M45L
7	NJ03055	Vibration Spring
8	NJ03007	Rail Holder #1 Assy
9	NJ03032	Vibration Roller
10	NJ03033	Fixing Bolt
11	NJ02042	Cover Bracket
12	NJB0010	HOPPER LEFT
	NJ01000#02	Hopper Left Assy
13	NJB0020	HOPPER RIGHT
	NJ01001#02	Hopper Right Assy
14	TM-TK-15	Rubber Foot
	TM-K11W	Rubber Foot
15	TM-166-18	Bumper
	TM-166-8	Bumper