

 
OHTAKE NSBI Serie

NSBI-10
NSBI-20

NSBI-12
NSBI-23

NSBI-14
NSBI-26

NSBI-17
NSBI-30

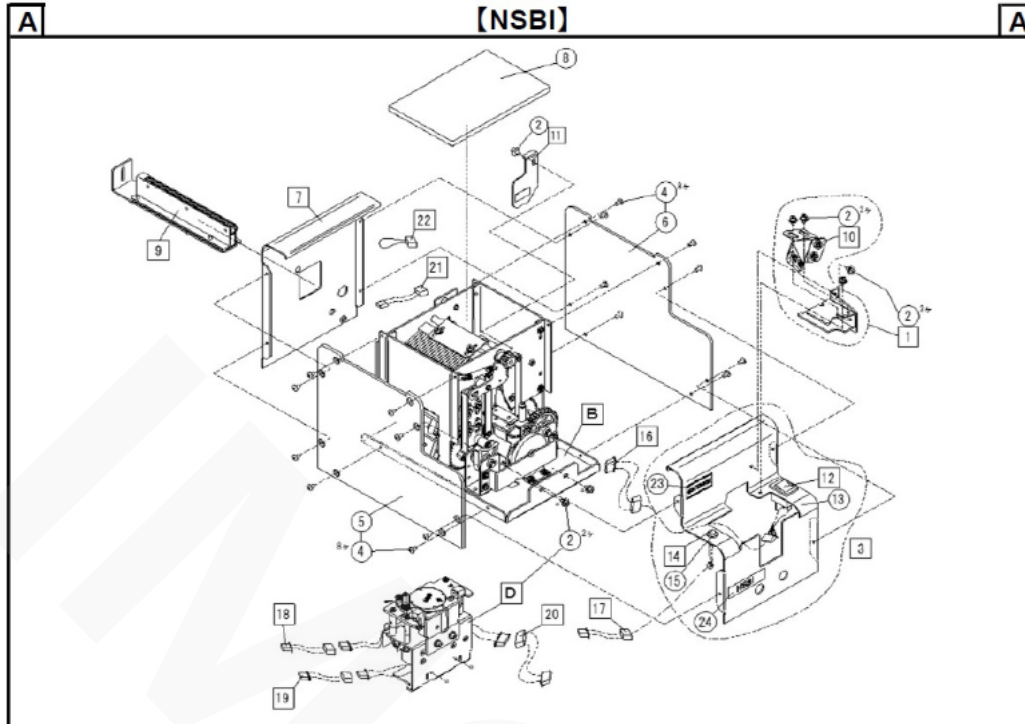

No.	Part Number	Name of Part
B	-	Block "B" Assy
	NSIB7200#01	Escaper Unit: NSBI2 M1.0
	NSIB7200#02	Escaper Unit: NSBI2 M1.2
	NSIB7200#03	Escaper Unit: NSBI2 M1.4
	NSIB7200#04	Escaper Unit: NSBI2 M1.7
	NSIB7200#05	Escaper Unit: NSBI2 M2.0
	NSIB7200#06	Escaper Unit: NSBI2 M2.3
	NSIB7200#07	Escaper Unit: NSBI2 M2.6
	NSIB7200#08	Escaper Unit: NSBI2 M3.0
D	※2 NSIB7107#01	Escaper Unit: NSBI M1.0
	※2 NSIB7107#02	Escaper Unit: NSBI M1.2
	※2 NSIB7107#03	Escaper Unit: NSBI M1.4
	※2 NSIB7107#04	Escaper Unit: NSBI M1.7
	※2 NSIB7107#05	Escaper Unit: NSBI M2.0
	※2 NSIB7107#06	Escaper Unit: NSBI M2.3
	※2 NSIB7107#07	Escaper Unit: NSBI M2.6
	※2 NSIB7107#08	Escaper Unit: NSBI M3.0
1	NSIB6109	Bit Guide Assy
2	ZZM00261	Hex. Socket Head Bolt PW, SW M2.6*5 (10pcs)
3	NSIB7121#01	Front Cover Assy (With Sticker)
4	ZZM00160	Plus Truss Head Screw M2.6*4 Ni (10pcs)
5	NSR07604#02	Left Side Cover
6	NSR07605#02	Right Side Cover
7	NSIR7114#01	Rear Cover Assy
	※2 NSIB7120	Rear Cover Assy
8	NSB07111	Upper Cover
	※3 BI10SET	Rail set M1.0
	※3 BI12SET	Rail set M1.2
	※3 BI14SET	Rail set M1.4
	※3 BI17SET	Rail set M1.7
	※3 BI20SET	Rail set M2.0
	※3 BI23SET	Rail set M2.3
	※3 BI26SET	Rail set M2.6
	※3 BI30SET	Rail set M3.0
10	NSIB6103	Bit Guide Assy
11	NSB02052#01	Passing Plate: SW1017(M1.0-M1.7)
	NSB02052#02	Passing Plate: SW2030(M2.0-M3.0)
12	NSIR9105#05	Power Switch (With Harness)
13	NSIB7102	Front Cover
14	NSIR9105#03	Front Sensor Detector LED (With Harness)
15	RTF-5010	LED Bezel
16	NSIR9104#06	Switch Junction Cable
17	NSIR9104#04	LED Junction Cable
18	NSIR9104#14	Sensor Junction Cable-Front Sensor
19	NSIR9104#02	Sensor Junction Cable-Origon Sensor
20	NSIR9104#09	Motor Junction Cable
21	NSIR9104#11	Power Junction Cable
22	NSIR9104#12	Jumper Connector
23	ZDE00001	Logo Sticker
24	ZDE00010#08	Sticker: NSBI

 
OHTAKE NSBI Serie

NSBI-10
NSBI-20

NSBI-12
NSBI-23

NSBI-14
NSBI-26

NSBI-17
NSBI-30

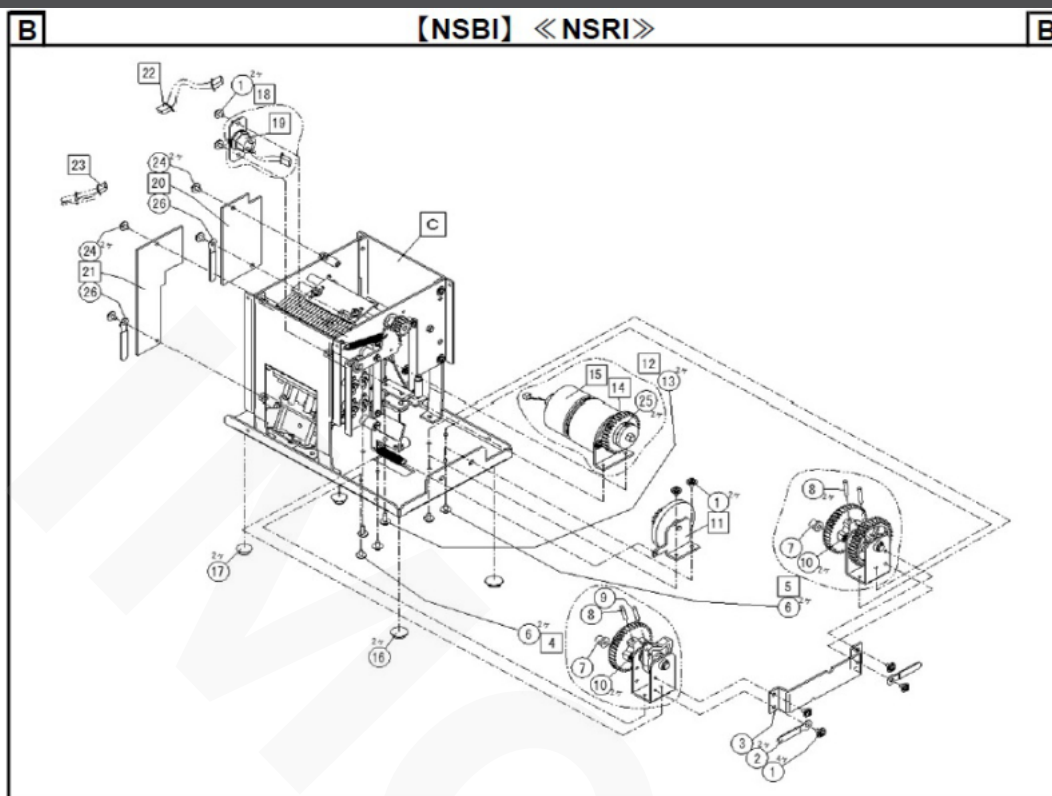

No.	Part Number	Name of Part
C	-	Hopper Unit: NSBI
1	ZZM00028	Pan Head Screw PW, SW M2.6*5 (10pcs)
2	CS-9	Coated Clip (10pcs)
3	NSIB3101	Driving Shaft Bracket Supporter
4	NSB03053	Driving Shaft Bracket Assy Left
5	NSB03054	Driving Shaft Bracket Assy Right
6	ZZM00054	Pan Head Screw PW, SW M2.6*5 Loosening Prevention (10pcs)
7	NSB03107	Driving Roller
8	ZZM00560	Spring Pin 2.5*20 (10pcs)
9	ZZM00558	Spring Pin 2.5*14 (10pcs)
10	ZZM00034	Pan Head Screw PW, SW M2.6*16 (10pcs)
11	NSB03055	Vibration Cam Assy
12	NSIB7115	Main Motor Unit
13	ZZM00030	Pan Head Screw PW, SW M2.6*8 (10pcs)
14	NJ04013	Driving Gear #1
15	NSIR9105#15	Main Motor (With Harness)
16	TM-166-12	Bumper
17	TM-166-3	Bumper
18	NSIB7118	DC Jack Assy
19	NSIR9105#07	Power Plug (With Harness)
20	ZPV00001#17	SPM Board For NSRI-NSBI
21	ZPV00001#04	Main Circuit Board For NSRI-NSBI
22	NSIR9104#08	Signal Junction Cable
23	NSIR9104#16	Signal Harness
24	ZZM00029	Pan Head Screw PW, SW M2.6*6 (10pcs)
25	ZZM00388	Hex. Socket Head Screw M4*8 Loosening Prevention (10pcs)
26	CS-1	Coated Clip (10pcs)

 
OHTAKE NSBI Serie

NSBI-10
NSBI-20

NSBI-12
NSBI-23

NSBI-14
NSBI-26

NSBI-17
NSBI-30

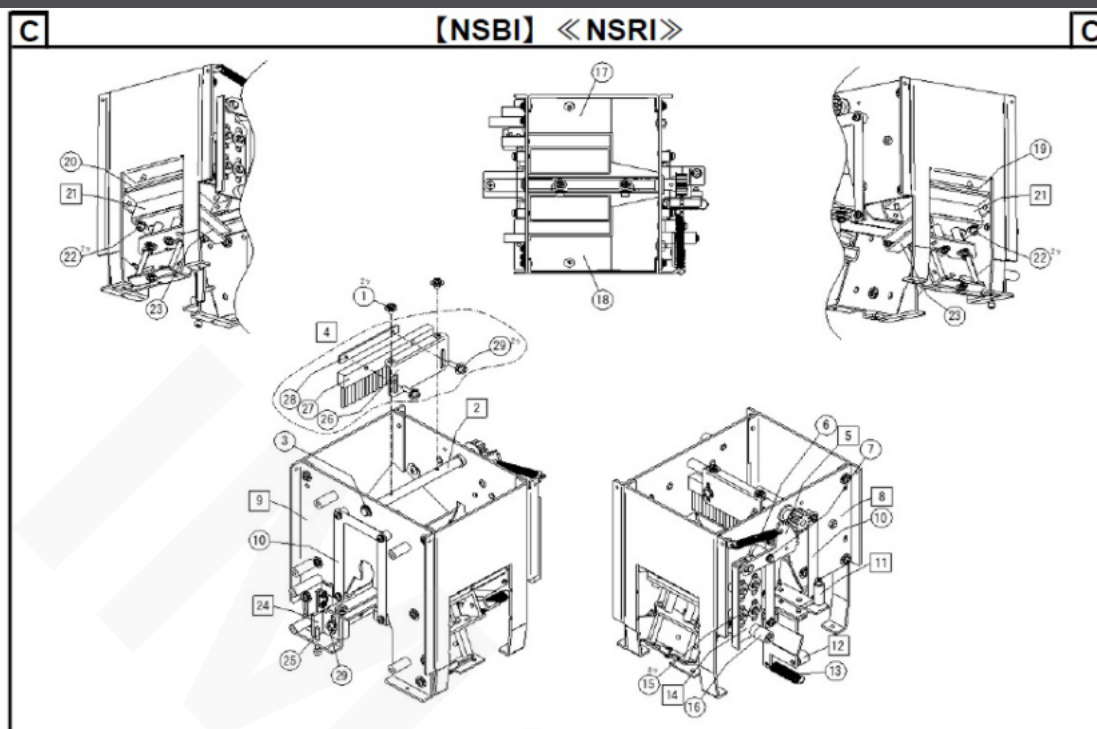

No.	Part Number	Name of Part
1	ZZM00028	Pan Head Screw PW,SW M2.6*5 (10pcs)
2	NSB02055	Brush Shaft Assy
3	ZZM00512	E-Type Snap Ring E-5 (10pcs)
4	NSB02053#01	Brush Assy (Standard)
	NSB02053#02	Brush Assy (Hard)(Option)
5	NSB02058	Brush Driving Gear Large 3
	NSB02051#04	Brush Driving Gear Large
6	NSB02127	Extension Spring
7	ZZM00510	E-Type Snap Ring E-3 (10pcs)
8	NSB02051#02	Front Hopper Wall
9	NSIB2051	Rear Hopper Wall
10	NSB02116#01	Vibration Plate
11	NSB04053	Rail Holder Fixing Bolt
12	NJ03032	Vibration Roller
13	NSB04120	Vibration Spring
14	NSB02054	Brush Driving Plate Assy
	NSB02064	Brush Driving Plate Assy
15	NSB02128	Polyslider (10pcs)
16	NSB02108	Brush Driving Plate Roller
17	NSB02122	Inclined Plate Right
18	NSB02123	Inclined Plate Left
19	NSB01123	Inclined Plate Holder Right
20	NSB01122	Inclined Plate Holder Left
21	NSB01054	Hopper Block Assy
22	ZZM01009	Hex. Socket Head Bolt PW,SW M2.6*12 (10pcs)
23	NSB01108	Driving Holder Slit Plate
24	NSR02056	Vibration Adjusting Plate Assy
25	NSB02125	Adjusting Screw
26	NSB02111	Brush Bracket #1
27	NSB02110#01	Brush (Standard)
	NSB02110#02	Brush (Hard)(Option)
28	NSB02112	Brush Bracket #2
29	ZZM01008	Hex. Socket Head Bolt PW,SW M2.6*10 (10pcs)

 
OHTAKE NSBI Serie

NSBI-10
NSBI-20

NSBI-12
NSBI-23

NSBI-14
NSBI-26

NSBI-17
NSBI-30

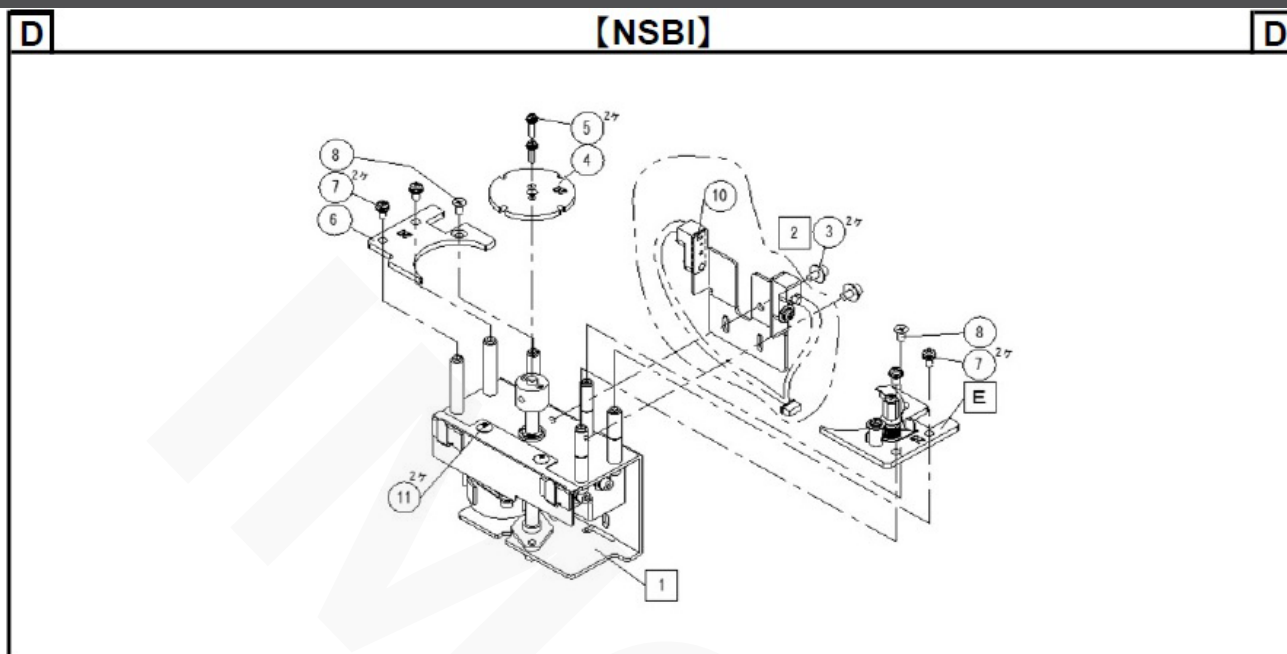

No.	Part Number	Name of Part
E	TPO20806#01	Stopper Assy M1.0:SIES10
	TPO20806#02	Stopper Assy M1.2:SIES12
	TPO20806#03	Stopper Assy M1.4:SIES14
	TPO20806#04	Stopper Assy M1.7:SIES17
	TPO20806#05	Stopper Assy M2.0:SIES20
	TPO20806#06	Stopper Assy M2.3:SIES23
	TPO20806#07	Stopper Assy M2.6:SIES26
	TPO20806#08	Stopper Assy M3.0:SIES30
1	NSIB7201	Escaper Driving Unit
	※2 NSIB7109	Escaper Driving Unit
2	NSIB7114	Front Sensor Assy
3	ZZM00261	Hex. Socket Head Bolt PW,SW M2.6*5 (10pcs)
4	TPO00604#01	Escaper:M1.0 SIE10
	TPO00604#02	Escaper:M1.2 SIE12
	TPO00604#03	Escaper:M1.4 SIE14
	TPO00604#04	Escaper:M1.7 SIE17
	TPO00604#05	Escaper:M2.0 SIE20
	TPO00604#06	Escaper:M2.3 SIE23
	TPO00604#07	Escaper:M2.6 SIE26
	TPO00604#08	Escaper:M3.0 SIE30
5	ZZM00071	Pan Head Screw PW(s),SW M2*8 Ni (10pcs)
6	TPO00608#01	Escaper Guide Right M1.0:SIEM10
	TPO00608#02	Escaper Guide Right M1.2:SIEM12
	TPO00608#03	Escaper Guide Right M1.4:SIEM14
	TPO00608#04	Escaper Guide Right M1.7:SIEM17
	TPO00608#05	Escaper Guide Right M2.0:SIEM20
	TPO00608#06	Escaper Guide Right M2.3:SIEM23
	TPO00608#07	Escaper Guide Right M2.6:SIEM26
	TPO00608#08	Escaper Guide Right M3.0:SIEM30
7	ZZM00060	Pan Head Screw PW(s),SW M2.6*5 (10pcs)
8	ZZM00614	Plus Countersunk Head Screw M2.6*5,Nylok (10pcs)
9	NSIR9105#13	Front Sensor (With Harness)
10	NSR08621	Light Receiver Slit Plate
11	ZZM00159	Plus Truss Head Screw M2.6*3 Ni (10pcs)

 
OHTAKE NSBI Serie

NSBI-10
NSBI-20

NSBI-12
NSBI-23

NSBI-14
NSBI-26

NSBI-17
NSBI-30

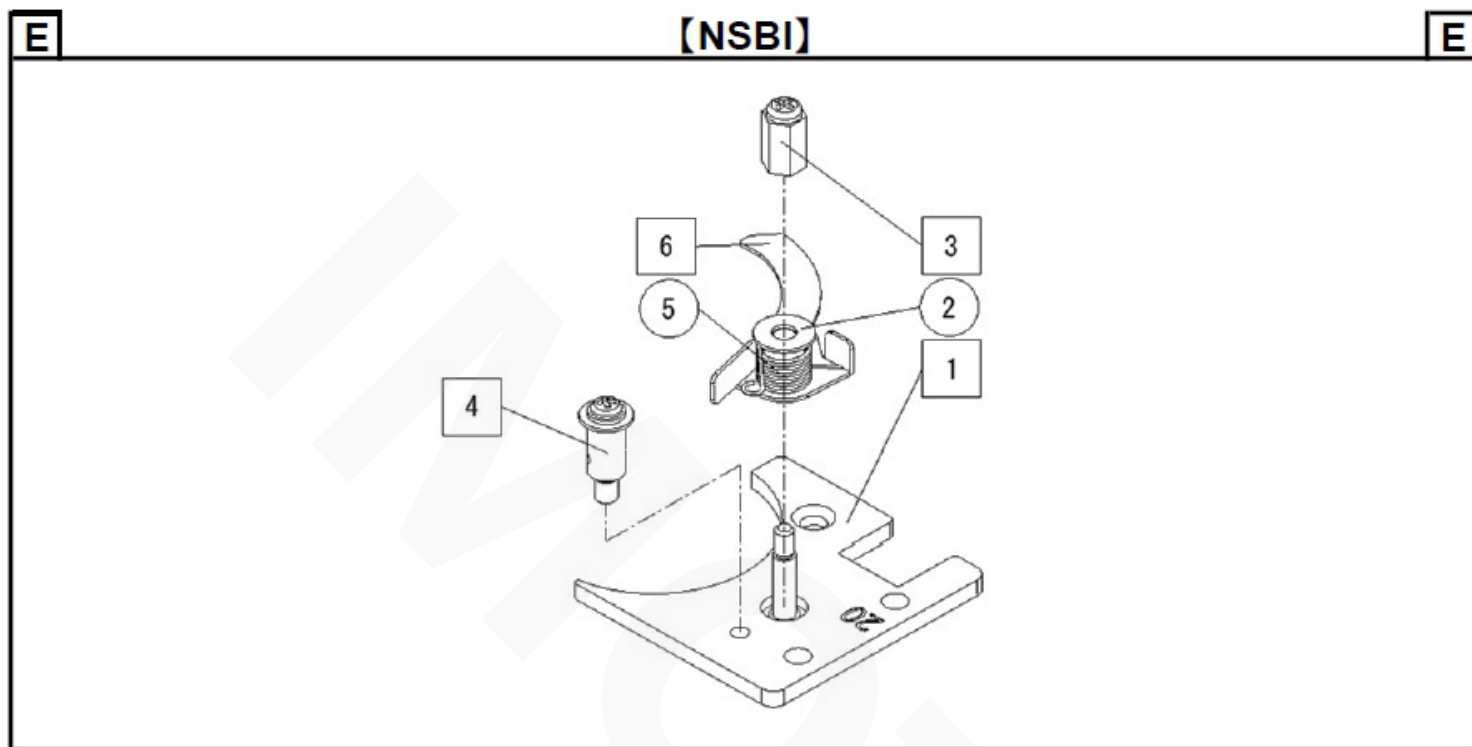

No.	Part Number	Name of Part
1	TPO20812#01	Escaper Guide Left(With Flange):M1.0
	TPO20812#02	Escaper Guide Left(With Flange):M1.2
	TPO20812#03	Escaper Guide Left(With Flange):M1.4
	TPO20812#04	Escaper Guide Left(With Flange):M1.7
	TPO20812#05	Escaper Guide Left(With Flange):M2.0
	TPO20812#06	Escaper Guide Left(With Flange):M2.3
	TPO20812#07	Escaper Guide Left(With Flange):M2.6
	TPO20812#08	Escaper Guide Left(With Flange):M3.0
2	ZZM00394	Plain Washer M3 (10pcs)
3	TPO20804	E-Stopper Spring Stopping Screw Assy
4	TPO20803	E-Stopper Spring Holding Assy
5	TPO91101	E-Stopper Spring
6	TPO00512	E-Stopper